

- Input file `sphereforging_adp.k`
 - Interactive 3D adaptivity
 - Adaptive control: `ADPFREQ` in `*CONTROL_ADAPTIVE`
 - `*CONTROL_REMESHING_EFG`
- Interactive control flags: IAT / IAAT
- Mesh distortion indicator: IAT1 / IAT2 / IAT3

